

Miniature Photoelectric Switches (Built-in Amplifier)

SA1E



User-friendly, high-performance photoelectric switches



• See website for details on approvals and standards.



Through-beam



Polarized retro-reflective



Diffuse-reflective



Background suppression (BGS)



Small-beam reflective




Coaxial polarized retro-reflective

Output reverse-polarity protection circuit


Several SA1E models are protected from incorrect wiring:

- Through-beam
- Polarized retro-reflective
- Diffuse-reflective
- Background Suppression (BGS)
- Small-beam Reflective

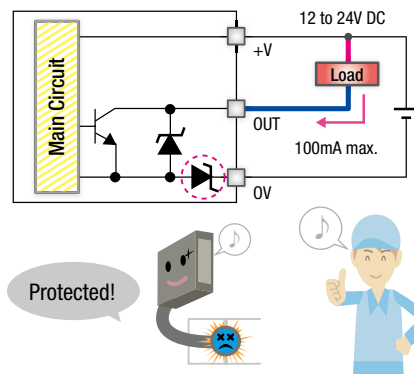


Long Distance Detection

Ideal for a wide range of application.

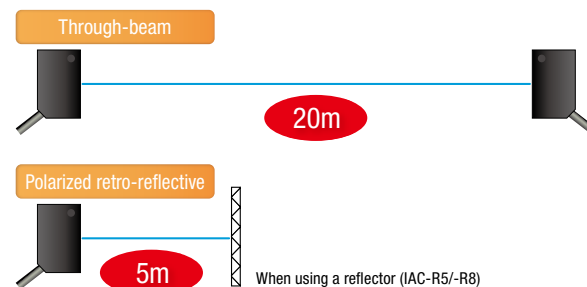


Various accessories

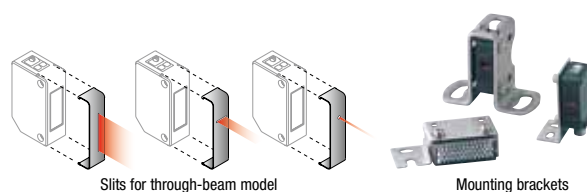

Background Suppression (BGS)


Detects objects of different colors

The improved sensing ability detects objects of different colors such as black and white more accurately.

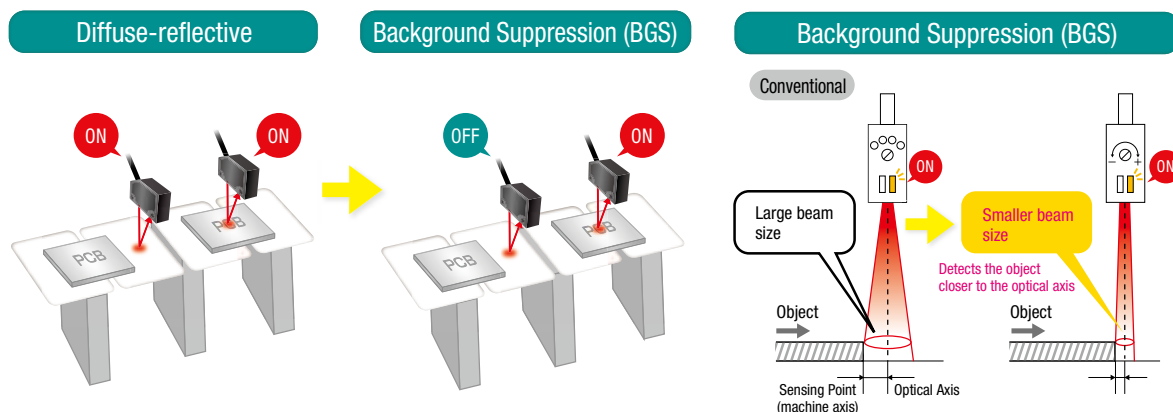


Ignores the background and detects the objects only

Smaller beam makes it possible to detect small objects and narrow gaps between the objects. The upgraded model is also less affected by the object colors.

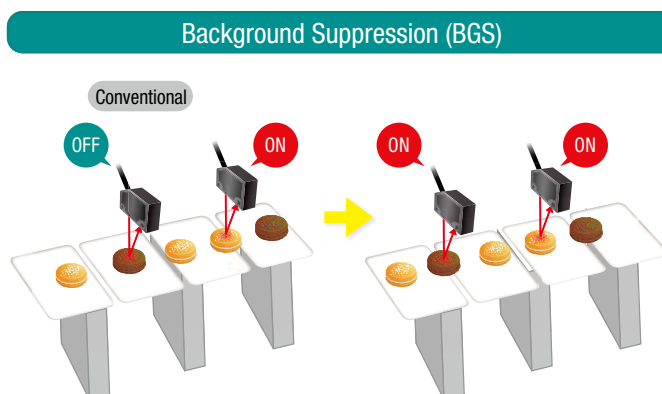

Coaxial Polarized Retro-reflective (Transparent Object Sensing)

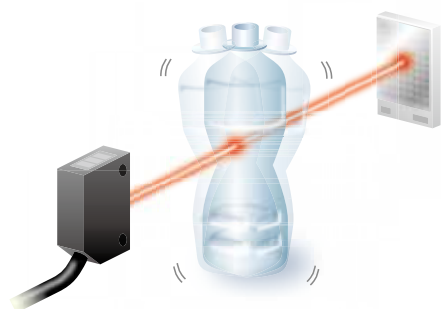


Coaxial optical structure and narrow beam ensure stable detection; unaffected by narrowing, inclination or shaking of a bottle.

Unaffected by object shapes.




Application Example

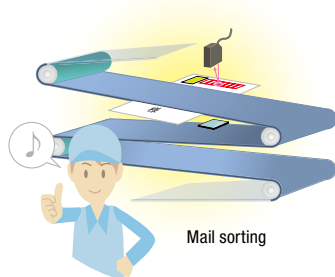


Mail sorting

Polarized Retro-reflective (non-coaxial)

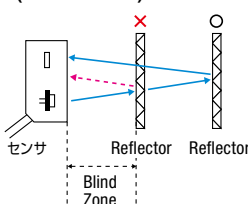








Coaxial Polarized Retro-reflective

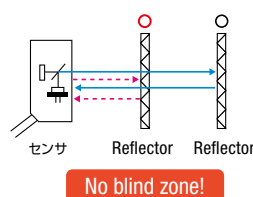

Because the SA1E-X co-axial polarized retroreflective model does not have blind zone, where the reflected light misses the light receiving element, like the SA1E-P polarized retro-reflective type, the SA1E-X can be used in applications where objects pass near the sensor.

SA1E Miniature Photoelectric Switches (Built-in Amplifier)

Package Quantity: 1

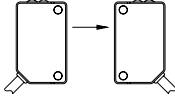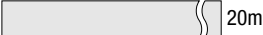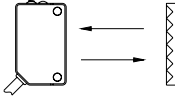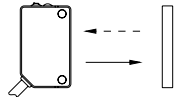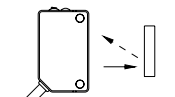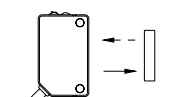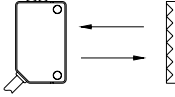Sensing Method			Sensing Range	Connection	Cable Length	Operation Mode	Part No.	
							NPN Output	PNP Output
Through-beam Infrared LED w/Sensitivity Adjustment			20m	Cable	1m	Light ON	SA1E-TN1	SA1E-TP1
						Dark ON	SA1E-TN2	SA1E-TP2
					2m	Light ON	SA1E-TN1-2M	SA1E-TP1-2M
						Dark ON	SA1E-TN2-2M	SA1E-TP2-2M
					5m	Light ON	SA1E-TN1-5M	SA1E-TP1-5M
						Dark ON	SA1E-TN2-5M	SA1E-TP2-5M
Polarized Retro-reflective Red LED w/Sensitivity Adjustment		<p>Note: Maintain at least the distance shown in the () between the SA1E photoelectric switch and reflector. Reflectors are not supplied and must be ordered separately.</p>	5.0m (50mm) When using IAC-R5/R8 3.0m (50mm) When using IAC-R6 2.0m (150mm) When using IAC-RS2 1.3m (150mm) When using IAC-RS1 1.6m (100mm) When using IAC-R7□	Cable	1m	Light ON	SA1E-PN1	SA1E-PP1
						Dark ON	SA1E-PN2	SA1E-PP2
					2m	Light ON	SA1E-PN1-2M	SA1E-PP1-2M
						Dark ON	SA1E-PN2-2M	SA1E-PP2-2M
					5m	Light ON	SA1E-PN1-5M	SA1E-PP1-5M
						Dark ON	SA1E-PN2-5M	SA1E-PP2-5M
Diffuse-reflective Infrared LED w/Sensitivity Adjustment		700 mm	See the characteristics on M-012.	Cable	1m	Light ON	SA1E-DN1	SA1E-DP1
						Dark ON	SA1E-DN2	SA1E-DP2
					2m	Light ON	SA1E-DN1-2M	SA1E-DP1-2M
						Dark ON	SA1E-DN2-2M	SA1E-DP2-2M
					5m	Light ON	SA1E-DN1-5M	SA1E-DP1-5M
						Dark ON	SA1E-DN2-5M	SA1E-DP2-5M
Background Suppression Red LED w/Sensing Range Adjustment		20 to 200 mm 40 to 200 mm Adjustable Sensing Range	See the characteristics on M-012.	Cable	1m	Light ON	SA1E-BN1	SA1E-BP1
						Dark ON	SA1E-BN2	SA1E-BP2
					2m	Light ON	SA1E-BN1-2M	SA1E-BP1-2M
						Dark ON	SA1E-BN2-2M	SA1E-BP2-2M
					5m	Light ON	SA1E-BN1-5M	SA1E-BP1-5M
						Dark ON	SA1E-BN2-5M	SA1E-BP2-5M
Small-beam Reflective Red LED w/Sensitivity Adjustment		50 to 150 mm	See the characteristics on M-012.	Cable	1m	Light ON	SA1E-NN1	SA1E-NP1
						Dark ON	SA1E-NN2	SA1E-NP2
					2m	Light ON	SA1E-NN1-2M	SA1E-NP1-2M
						Dark ON	SA1E-NN2-2M	SA1E-NP2-2M
					5m	Light ON	SA1E-NN1-5M	SA1E-NP1-5M
						Dark ON	SA1E-NN2-5M	SA1E-NP2-5M
Coaxial Polarized Retro-reflective Red LED With Sensitivity Adjustment		Note: Reflector is not supplied and must be ordered separately.	2.0m (when using IAC-R9) 1.0m [100 mm] (when using IAC-R10) 1.0m [100 mm] (when using IAC-R11)	Cable	1	Light ON	SA1E-XN1	SA1E-XP1
						Dark ON	SA1E-XN2	SA1E-XP2
					2	Light ON	SA1E-XN1-2M	SA1E-XP1-2M
						Dark ON	SA1E-XN2-2M	SA1E-XP2-2M
					5	Light ON	SA1E-XN1-5M	SA1E-XP1-5M
						Dark ON	SA1E-XN2-5M	SA1E-XP2-5M
			See the characteristics on M-013.	M8 Connector	—	Light ON	SA1E-XN1C	SA1E-XP1C
						Dark ON	SA1E-XN2C	SA1E-XP2C

Specifications

Sensing Method	Through-beam	Polarized Retro-reflective
Part No.	SA1E-T□	SA1E-P□
Power Voltage	12 to 24V DC (Operating range: 10 to 30V DC) equipped with reverse-polarity protection	
Current Draw	Projector: 15 mA Receiver: 20 mA	30mA
Sensing Range	20m	5.0m (IAC-R5/R8) 3.0m (IAC-R6) 2.0m (IAC-RS2) 1.3m (IAC-RS1) 1.6m (IAC-R7□) (Note 1)
Adjustable Sensing Range	—	
Detectable Object	Opaque	Opaque/mirror-like objects
Hysteresis	—	
Response Time	1 ms maximum	
Sensitivity Adjustment	Adjustable using a potentiometer (approx. 240°) Through-beam and polarized retro-reflective models are also available without sensitivity adjustment.	
Sensing Range Adjustment	—	
Light Source Element	Infrared LED	Red LED
Operation Mode	Light ON/Dark ON	
Control Output	NPN open collector or PNP open collector (30V DC, 100 mA maximum, short-circuit protection) Voltage drop: 2V max. (30V DC, 100 mA max) 1.2V max. (30V DC, 10 mA max) With output reverse connection protection control circuit	
LED Indicators	Operation LED: Yellow Stable LED: Green Power LED: Green (Through-beam model projector)	
Interference Prevention	—	Two units can be mounted in close proximity.
Degree of Protection	IP67 (IEC 60529)	
Extraneous Light Immunity	Sunlight: 10,000 lx maximum, Incandescent lamp: 5,000 lux maximum (at receiver)	
Operating Temperature	-25 to +55°C (no freezing)	
Operating Humidity	35 to 85% RH (no condensation)	
Storage Temperature	-40 to +70°C (no freezing)	
Insulation Resistance	Between live part and mounting bracket: 20 MΩ maximum (500V DC megger)	
Dielectric Strength	Between live part and mounting bracket: 1000V AC, 50/60 Hz, 1 minute	
Vibration Resistance	Damage limits: 10 to 500 Hz, 90 m/s ² , 1 cycle 5 mins, in each of 3 axes	
Shock Resistance	Damage limits: 1000 m/s ² , 6 shocks in each of 3 axes	
Material	Case	PBT
	Lens	PMMA
	Indicator Model	PC
Weight (approx.)	Cable Model	Projector: 30g, Receiver: 30g (Note 2) 30g (Note 2)
	Connector Model	Projector: 10g, Receiver: 10g 10g
Connection Method	Cable Model	ø3.5 mm, 2-core, 0.2 mm ² cable ø3.5 mm, 3-core, 0.2 mm ² cable
	Connector Model	M8 connector (4-pin)

Note 1: Maintain at least the distance shown below between the SA1E photoelectric switch and reflector.

IAC-R5/R6/R8: 50 mm

IAC-R7: 100 mm

IAC-RS1/RS2: 150 mm

The detection distance cannot be guaranteed if the reflector is deformed or the tape type reflector is applied on uneven surface.

Note 2: Cable length: 1m (50g when the cable length is 2m. 110g when the cable length is 5m.)

APEM

Switches &
Pilot Lights

Control Boxes

Emergency
Stop SwitchesEnabling
Switches

Safety Products

Explosion Proof

Terminal Blocks

Relays & Sockets

Circuit
Protectors

Power Supplies

LED Illumination

Controllers

Operator
Interfaces

Sensors

AUTO-ID

SA1E

SA1E-L

SA1E Miniature Photoelectric Switches (Built-in Amplifier)

Specifications

Sensing Method		Diffuse-reflective	Background Suppression (BGS)	Small-beam Reflective	Coaxial Polarized Retro-reflective (Transparent Object Sensing)
Part No.		SA1E-D□	SA1E-B□	SA1E-N □	SA1E-X□
Power Voltage		12 to 24V DC (Operating range: 10 to 30V DC), equipped with reverse-polarity protection			
Current Draw		30 mA			20 mA
Sensing Range		700 mm (using 200 × 200 mm white mat paper)	20 mm to preset (using 200 × 200 mm white mat paper)	50 to 150 mm (using 100 × 100 mm white mat paper)	2 m (using IAC-R9)
Adjustable Sensing Range		—	40 to 200 mm	—	
Detectable Object		Opaque/Transparent	Opaque	Opaque/Transparent	Opaque, transparent and mirror-like objects
Hysteresis		20% maximum	10% maximum	20% maximum	—
Response Time		1 ms maximum			500 μs maximum
Sensitivity Adjustment		Adjustable using a potentiometer (approx. 240°)	—	Adjustable using a potentiometer (approx. 240°)	
Sensing Range Adjustment		—	6-turn control knob	—	
Light Source Element		Infrared LED	Red LED		
Operation Mode		Light ON/Dark ON			
Control Output		NPN open collector or PNP open collector (30V DC, 100 mA maximum with short circuit protection circuit)			
		Voltage drop: 2V max. (30V DC, 100 mA) 1.2V max. (30V DC, 100 mA) Output reverse-polarity protection circuit	Voltage drop: 2V max. (30V DC, 100 mA) Output reverse-polarity protection circuit	Voltage drop: 2V max. (30V DC, 100 mA) 1.2V max. (30V DC, 100 mA) Output reverse-polarity protection circuit	Voltage drop: 2V max. (30V DC, 100mA)
LED Indicators		Operation LED: Yellow Stable LED: Green	Operation LED: Yellow	Operation LED: Yellow Stable LED: Green	Operation LED: Yellow
Interference Prevention		Two units can be mounted in close proximity.			
Degree of Protection		IP67 (IEC 60529)			
Extraneous Light Immunity		Sunlight: 10,000 lux maximum, Incandescent lamp: 5,000 lux maximum (at receiver)			
Operating Temperature		−25 to +55°C (no freezing)			
Operating Humidity		35 to 85% RH (no condensation)			
Storage Temperature		−40 to +70°C (no freezing)			
Insulation Resistance		Between live part and mounting bracket: 20 MΩ maximum (500V DC megger)			
Dielectric Strength		Between live part and mounting bracket: 1000V AC, 50/60 Hz, 1 minute			
Vibration Resistance		Damage limits: 10 to 500 Hz, 90 m/s ² , 1 cycle 5 mins in each of 3 axes			Damage limits: 10 to 55 Hz, double amplitude 1.5mm, 20 cycles in each of 3 axes
Shock Resistance		Damage limits: 1000 m/s ² , 6 shocks in each of 3 axes			Damage limits: 500 m/s ² , 10 shocks in each of 3 axes
Material	Housing	PBT			
	Lens	PMMA			
	Indicator cover	PC			
Weight (approx.)	Cable Model	30g (Note 1)	35g (Note 2)	30g (Note 1)	35g (Note 2)
	Connector Model	10g	25g	10g	20g
Connection Method	Cable Model	ø3.5 mm, 3-core, 0.2 mm ² cable			
	Connector Model	M8 connector (4-pin)			

Note 1: Cable length: 1m (50g when the cable length is 2m. 110g when the cable length is 5m.)

Note 2: Cable length: 1m (55g when the cable length is 2m. 120g when the cable length is 5m.)

Slit and Sensing Range


A slit, which changes the beam size of through-beam sensors, can easily be attached to the sensing side of the through-beam projector and receiver. Three different slit widths are available.

Slit		w/Sensitivity Adjustment			
		Sensing Range (m)		Minimum Detectable Object Width (mm) (Note 1)	
		Attached on:			
Part No.	Slit Width: A (See M-017)	Receiver	Receiver/Projector	Receiver	Receiver/Projector
SA9Z-S06	0.5 mm	2.5	1.0	0.5	0.5
SA9Z-S07	1.0 mm	3.5	1.5	1.0	1.0
SA9Z-S08	2.0 mm	6.0	3.5	2.0	2.0
SA9Z-S09	0.5 mm	2.0	0.7	0.5	0.5
SA9Z-S10	1.0 mm	3.0	1.5	1.0	1.0
SA9Z-S11	2.0 mm	5.5	3.0	2.0	2.0
SA9Z-S12	0.5 mm	0.8	0.08	0.5	0.5
SA9Z-S13	1.0 mm	1.5	0.3	1.0	1.0
SA9Z-S14	2.0 mm	2.5	1.2	2.0	2.0

Note 1: At 1 mm from receiver surface.

- The slit can be installed onto the front easily (see the figure at right).

The slit can be pressed to snap onto the front easily.

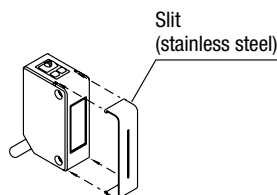

Horizontal slits and round slits have an orientation. Make sure that the TOP marking comes on top of the sensor (LED side).

Output Circuit & Wiring Diagram

Through-beam


Polarized reflective

Diffuse-reflective


Background suppression (BGS)

Small-beam reflective


NPN Output

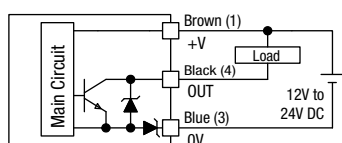


Connector Pin Assignment




PNP Output

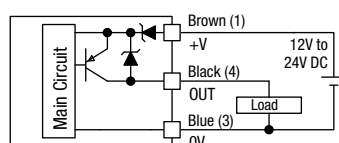

Connector Pin Assignment



Through-beam Projector

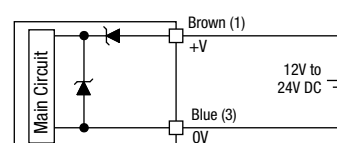


Connector Pin Assignment




Coaxial polarized retro-reflective (Transparent Object Sensing)


NPN Output

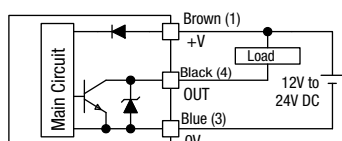


Connector Pin Assignment




PNP Output

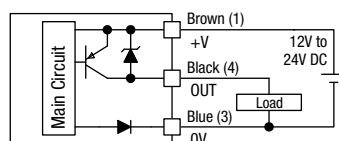


Connector Pin Assignment



Through-beam Projector

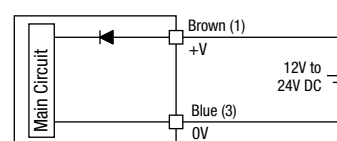

Connector Pin Assignment






SA1E Miniature Photoelectric Switches (Built-in Amplifier)

Dimensions

All dimensions in mm

Cable Model

Through-beam

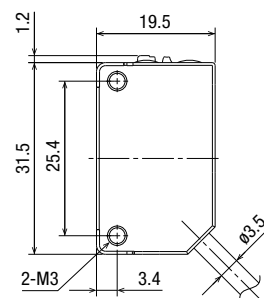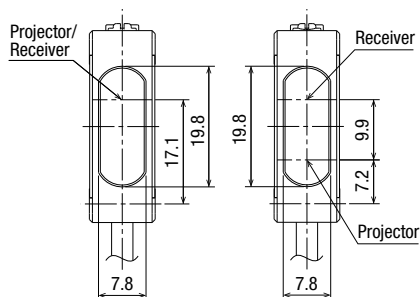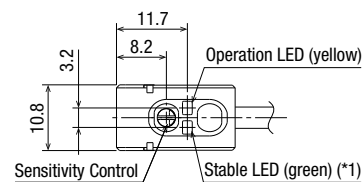


Polarized retro-reflective
Diffuse-reflective
Background Suppression (BGS)
Small-beam reflective



*1: Stable LED is not installed on background suppression (BGS) model.

Coaxial polarized retro-reflective
(Transparent Object Sensing)

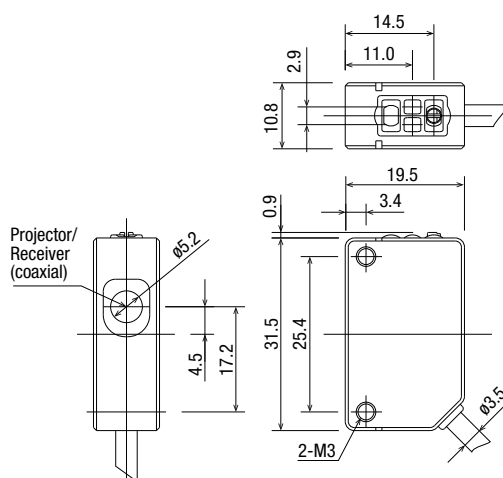

APEM

Switches &
Pilot Lights

Control Boxes

Emergency
Stop SwitchesEnabling
Switches

Safety Products

Explosion Proof

Terminal Blocks

Relays & Sockets

Circuit
Protectors

Power Supplies

LED Illumination

Controllers

Operator
Interfaces

Sensors

AUTO-ID

SA1E

SA1E-L

Dimensions


All dimensions in mm

Connector Model

Through-beam




Polarized retro-reflective
 Diffuse-reflective
 Background Suppression (BGS)
 Small-beam reflective

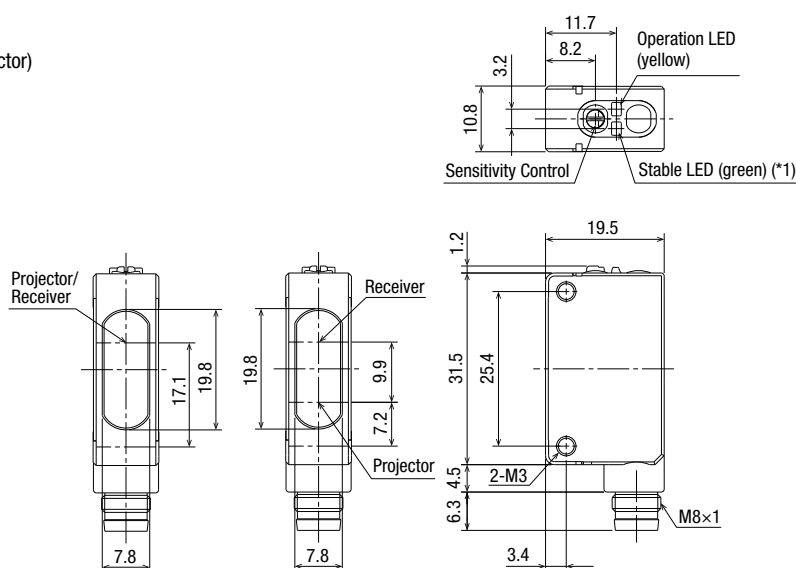

*1: Stable LED is not installed on background suppression (BGS) model.

Coaxial polarized retro-reflective
 (Transparent Object Sensing)

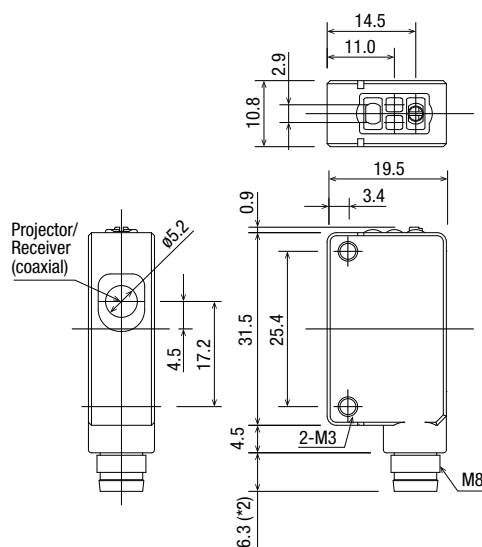

*2: The connector length is 18 mm when a right-angle connector cable (SA9Z-CM8K-4L□) is attached.

APEM

Switches &
Pilot Lights

Control Boxes

Emergency
Stop SwitchesEnabling
Switches

Safety Products

Explosion Proof

Terminal Blocks

Relays & Sockets

Circuit
Protectors

Power Supplies

LED Illumination

Controllers

Operator
Interfaces

Sensors

AUTO-ID


SA1E

SA1E-L


Characteristics (Typical)

1-1. Through-beam SA1E-T□


Excess Gain (Without slit)

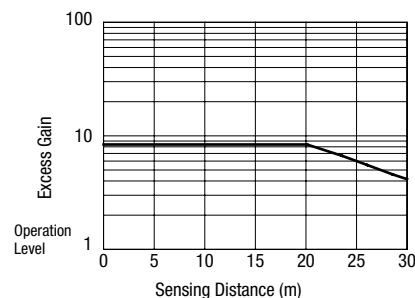


Lateral Displacement (Without slit)

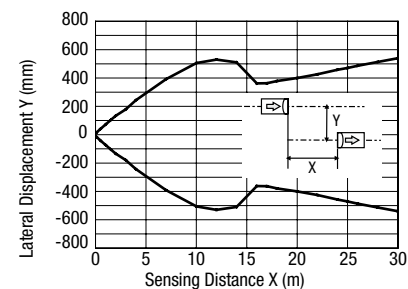


Angle (Without slit)

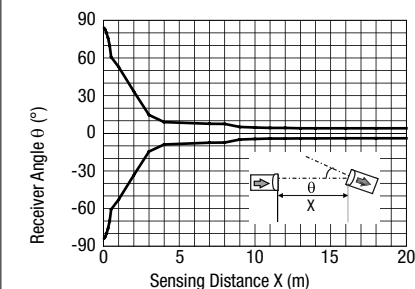


Excess Gain (With vertical slit)

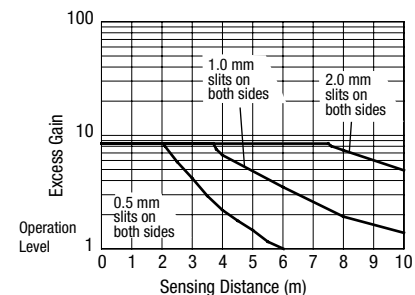


Excess Gain (With horizontal slit)

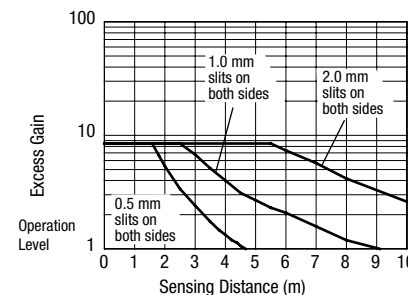


Excess Gain (With round slit)

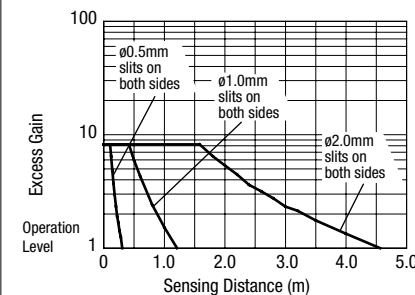


Lateral Displacement (With 0.5-mm vertical slit)

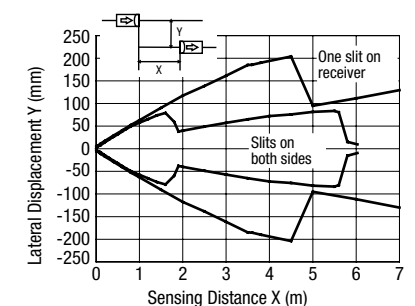


Lateral Displacement (With 1.0-mm vertical slit)

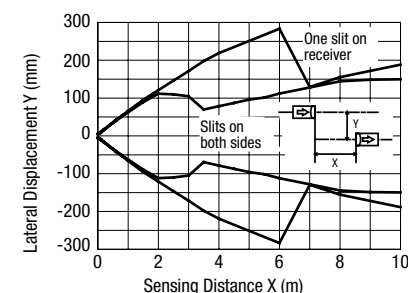


Lateral Displacement (With 2.0-mm vertical slit)

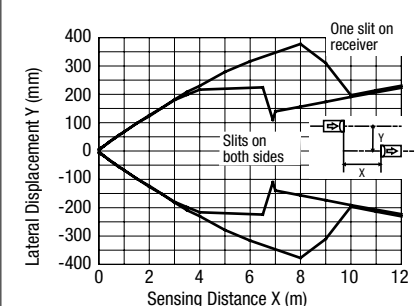


Lateral Displacement (With 0.5-mm horizontal slit)

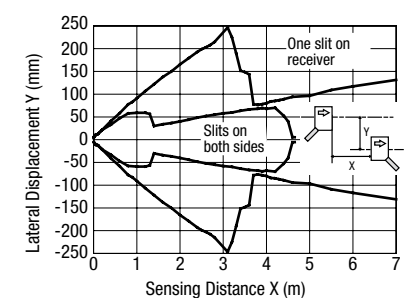


Lateral Displacement (With 1.0-mm horizontal slit)

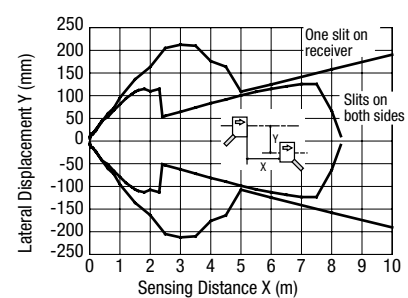


Lateral Displacement (With 2.0-mm horizontal slit)

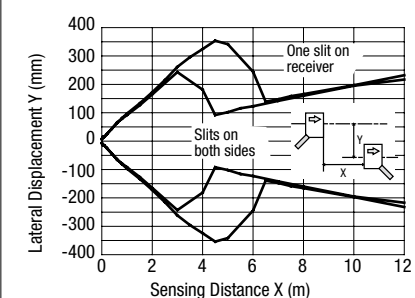


Lateral Displacement (With ø0.5-mm round slit)

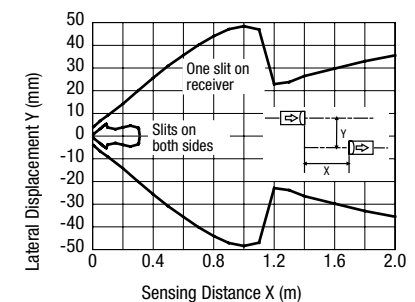

Lateral Displacement (With ø1.0-mm round slit)

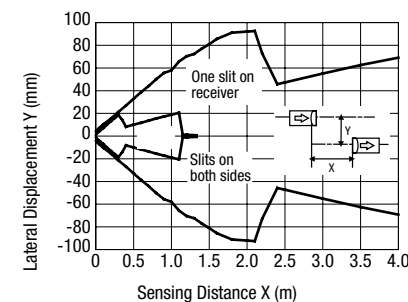


Lateral Displacement (With ø2.0-mm round slit)

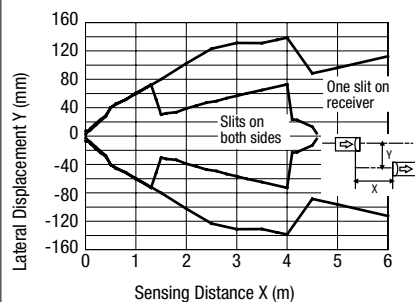


Characteristics (Typical)

2. Polarized Retro-reflective SA1E-P□


Excess Gain

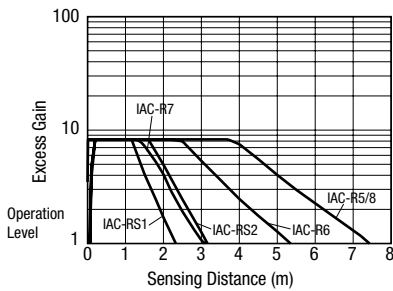

Lateral Displacement

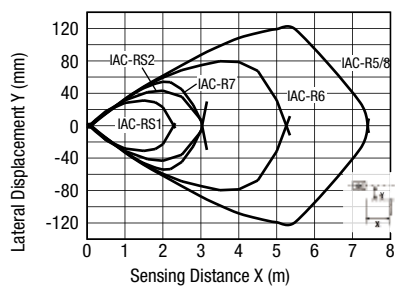


Angle (when using IAC-R5/-R8)

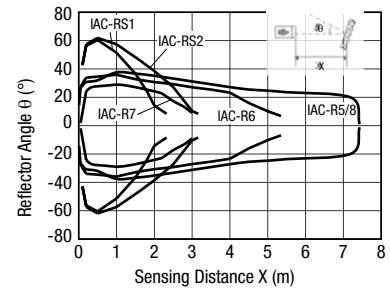


3. Diffuse-Reflective SA1E-D□


Excess Gain

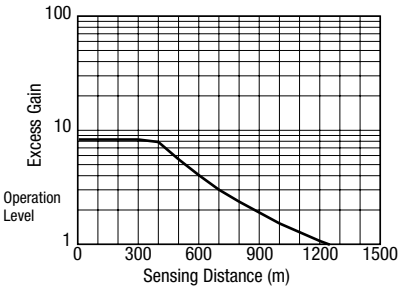

Lateral Displacement

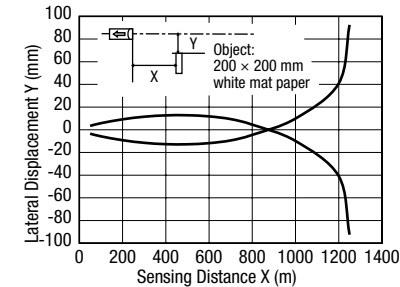


Angle (when using IAC-R5/-R8)

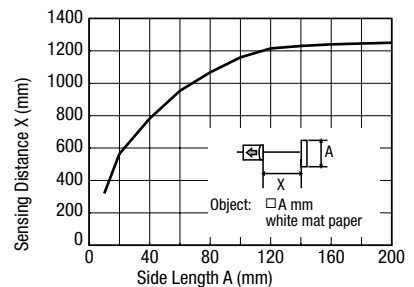


4. Background Suppression SA1E-B□


Lateral Displacement (Preset 100 mm)

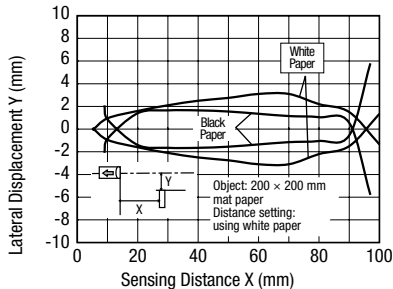


Lateral Displacement (Preset 200 mm)

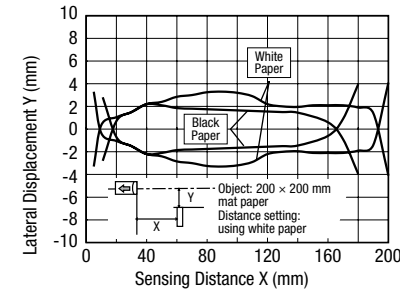


Light Beam Diameter

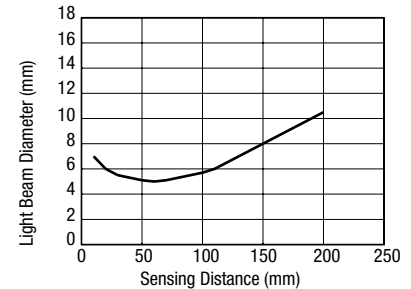


Sensing Distance vs. Hysteresis

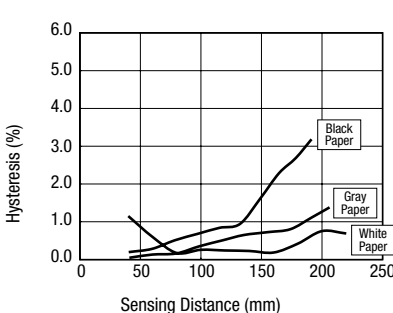

Control Knob vs. Sensing Distance

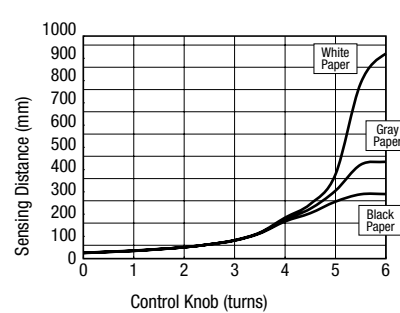


Color Matte Paper and Other Materials

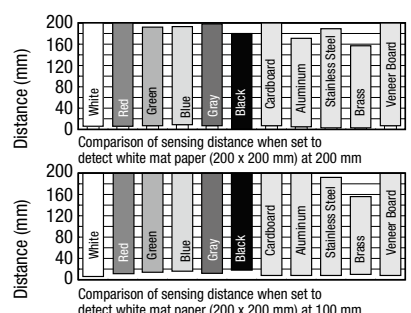


5. Small-beam Reflective SA1E-N□


Excess Gain

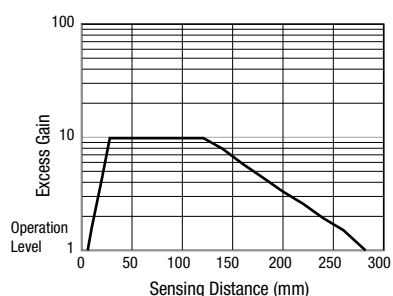

Lateral Displacement

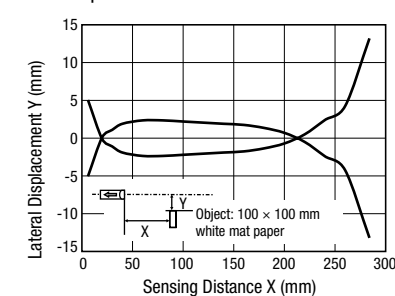


Object Size vs Sensing Distance

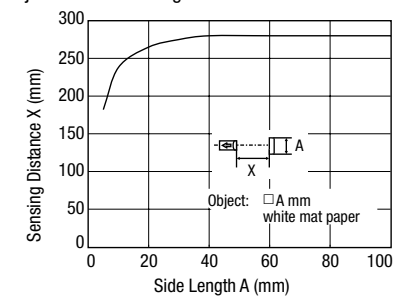


6. Coaxial Polarized Retro-reflective SA1E-X□


Excess Gain

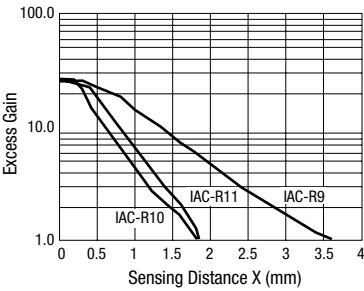


Lateral Displacement

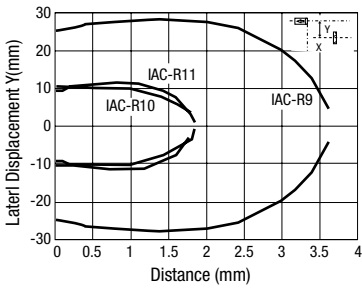

Angle

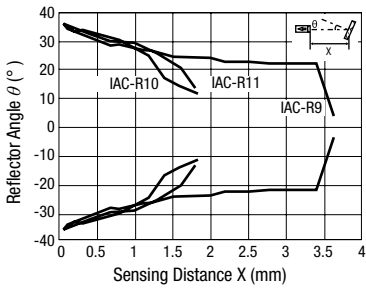

Light Beam Diameter

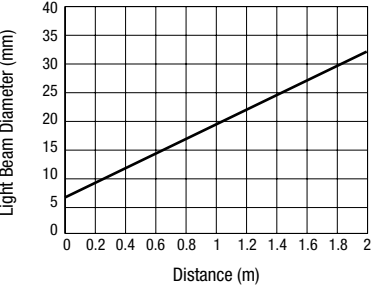

APEM

Switches & Pilot Lights

Control Boxes

Emergency Stop Switches

Enabling Switches

Safety Products

Explosion Proof

Terminal Blocks

Relays & Sockets

Circuit Protectors

Power Supplies

LED Illumination

Controllers

Operator Interfaces

Sensors

AUTO-ID

SA1E

SA1E-L

Accessories (optional)

Slits (for through-beam)

Item	Slit Size	Part No.	Ordering No.	Package Quantity
Vertical Slit	0.5 mm × 18 mm	SA9Z-S06	SA9Z-S06PN02	2
	1.0 mm × 18 mm	SA9Z-S07	SA9Z-S07PN02	
	2.0 mm × 18 mm	SA9Z-S08	SA9Z-S08PN02	
Horizontal Slit	0.5 mm × 6.5 mm	SA9Z-S09	SA9Z-S09PN02	
	1.0 mm × 6.5 mm	SA9Z-S10	SA9Z-S10PN02	
	2.0 mm × 6.5 mm	SA9Z-S11	SA9Z-S11PN02	
Round Slit	ø0.5 mm	SA9Z-S12	SA9Z-S12PN02	
	ø1.0 mm	SA9Z-S13	SA9Z-S13PN02	
	ø2.0 mm	SA9Z-S14	SA9Z-S14PN02	

Reflectors (for polarized retro-reflective)

Item	Part No.	Package Quantity
Reflector	Standard	IAC-R5
	Small	IAC-R6
	Large	IAC-R8
	Narrow (rear/side mounting)	IAC-R7M
	Narrow (rear mounting)	IAC-R7B
	Narrow (side mounting)	IAC-R7S
	Tape Type (40 × 35 mm)	IAC-RS1
Reflector Mounting Bracket	Tape Type (80 × 70 mm)	IAC-RS2
	For IAC-R5	IAC-L2
	For IAC-R6	IAC-L3
	For IAC-R8	IAC-L5

- See **M-016** to **M-017** for dimensions.
- The IAC-L2 is not supplied with mounting screws and nuts. Use commercially available M4 screws and nuts for mounting the IAC-R5 reflector.
- The IAC-L3 is supplied with two mounting screws (M3 × 8 mm sems screws).
- The IAC-L5 is supplied with two mounting screws (M4 × 10 mm sems screws).
- The IAC-R7M and IAC-R7S are supplied with two M3 × 8 mm self-tapping screws, two flat washers, and two spring washers.
- The IAC-R7B is supplied with an M3 × 8 mm self-tapping screw, a flat washer, and a spring washer.

Sensor Mounting Brackets

Item	Part No.	Package Quantity
Main Unit Mounting Brackets	Vertical Mounting	SA9Z-K01
	Horizontal Mounting	SA9Z-K02
	Cover type	SA9Z-K03
	Back Mounting	SA9Z-K04

- Two mounting screws (M3 × 12 mm sems screws) are supplied with the SA9Z-K01, SA9Z-K02, and SA9Z-K04.
- Two mounting screws (M3 × 14 mm sems screws) are supplied with the SA9Z-K03.
- The through-beam model requires two mounting brackets, one each for the projector and the receiver.
- The SA9Z-K02 cannot be used for the connector models.
- Contact IDEC about mounting brackets for the connector.

Connector Cable (for M8 connector model)

Number of Core Wires	Style & Length	Part No.	Package Quantity
4	Straight, 2m	SA9Z-CM8K-4S2	1
	Right angle, 2m	SA9Z-CM8K-4L2	
	Straight, 5m	SA9Z-CM8K-4S5	
	Right angle, 5m	SA9Z-CM8K-4L5	

Reflectors

(used only for coaxial polarized retro-reflective)

Item	Part No.	Package Quantity
Reflector	Standard	IAC-R9
	Small	IAC-R10
	Ultra-small	IAC-R11
Reflector Mounting Bracket	For IAC-R9	IAC-L3

Air Blower Mounting Block

Item	Part No.	Package Quantity
Air Blower Mounting Block	SA9Z-A02	1

- Two mounting screws (M3 × 20 mm sems screws), one M5 × 6 mm screw for plugging the air supply port, and one gasket (0.5 mm thick) are supplied.
- The air tube fitting and mounting bracket are not supplied and must be ordered separately (recommended mounting bracket: SA9Z-K01).
- Material: Anodized aluminum surface

Sensitivity Control Screwdriver

Item	Part No.	Package Quantity
Sensitivity Control Screwdriver	SA9Z-AD01	1




SA1E Miniature Photoelectric Switches (Built-in Amplifier)

Accessory Dimensions

All dimensions in mm

Mounting Brackets


Vertical Mounting SA9Z-K01

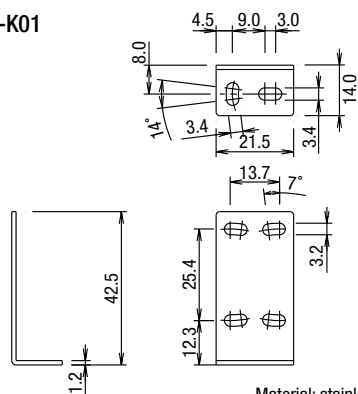


Material: stainless steel

With Mounting Bracket

- *1: Center of optical axis (through-beam)
 *2: Center of optical axis (polarized retro-reflective, diffuse reflective, and small-beam reflective models)

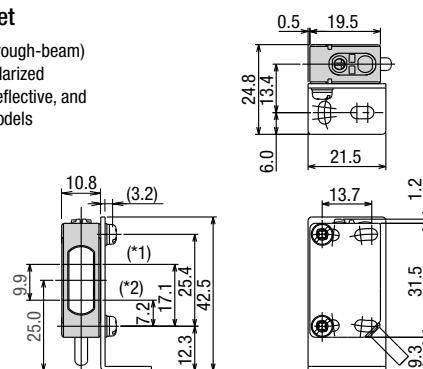


Horizontal Mounting SA9Z-K02

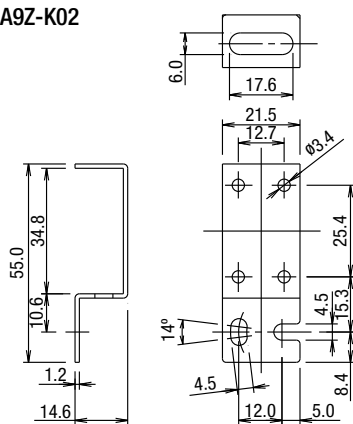


Material: stainless steel

With Mounting Bracket

- *1: Center of optical axis (through-beam)
 *2: Center of optical axis (polarized retro-reflective, diffuse reflective, and small-beam reflective models)

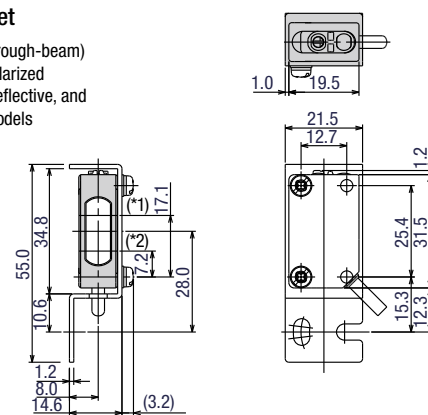


Cover Model SA9Z-K03

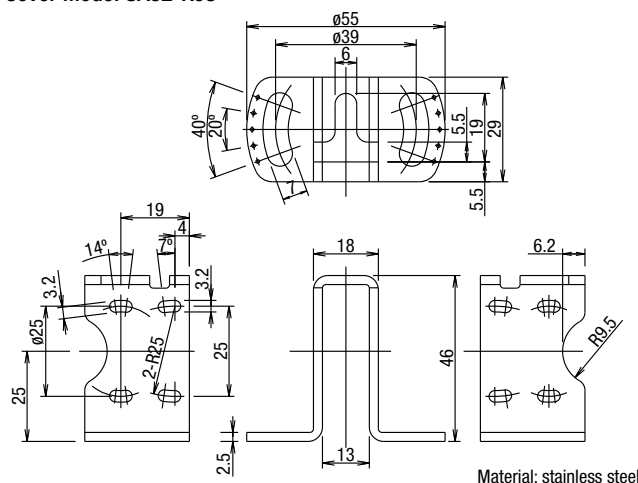


Material: stainless steel

With Mounting Bracket

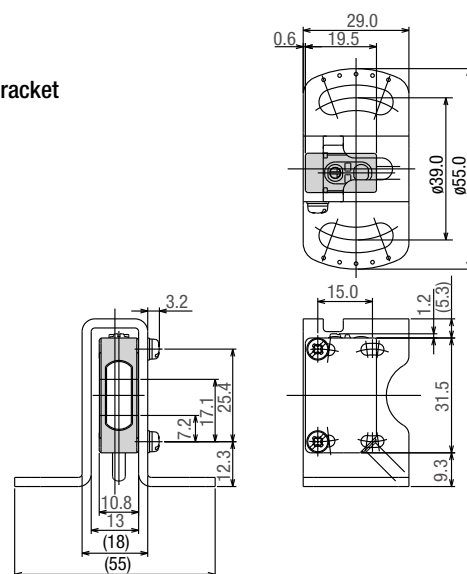


Back Mounting SA9Z-K04

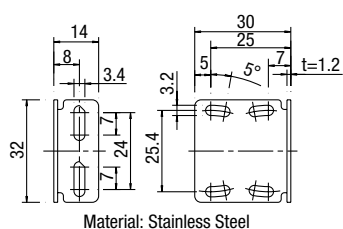

Material: Stainless Steel

With Mounting Bracket

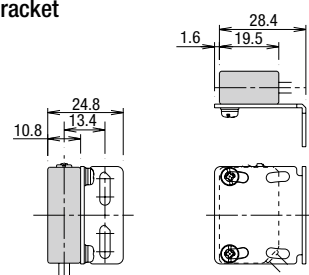


Accessory Dimensions


All dimensions in mm

Reflectors


IAC-R5

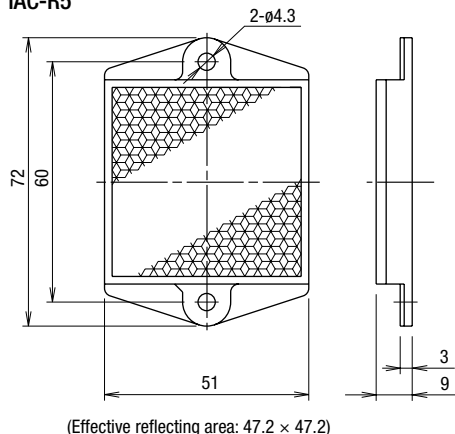


IAC-R6

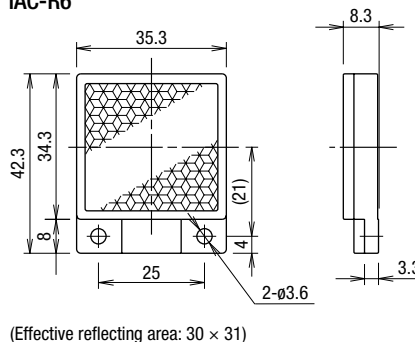


IAC-R8

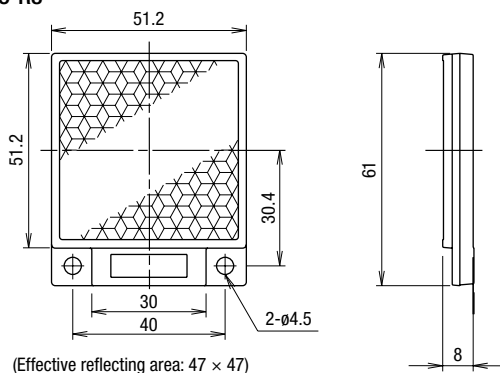


IAC-RS1

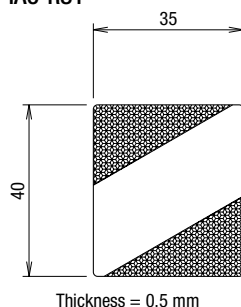


IAC-RS2

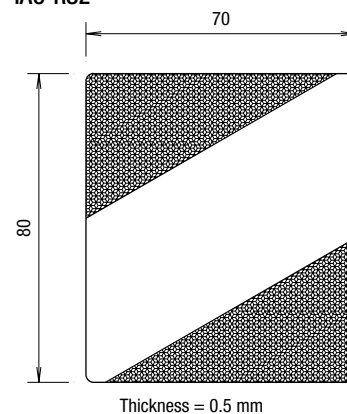


IAC-R7M (rear/side mounting)

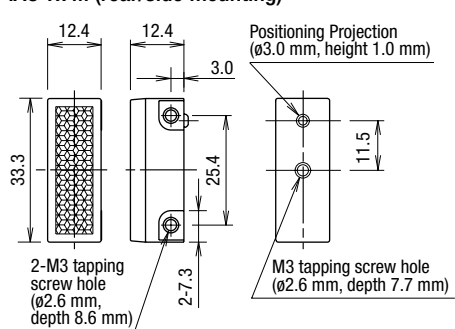

IAC-R7B (rear mounting)

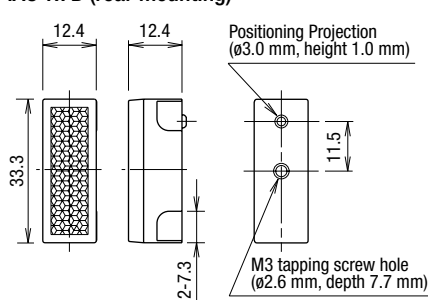


IAC-R7S (side mounting)

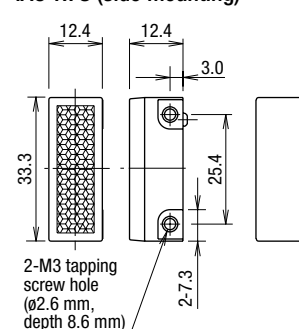


- Effective reflecting area: 8.6 × 29.5
- The mounting plate for reflector must be 0.8 to 2.5 mm in thickness.


IAC-R9

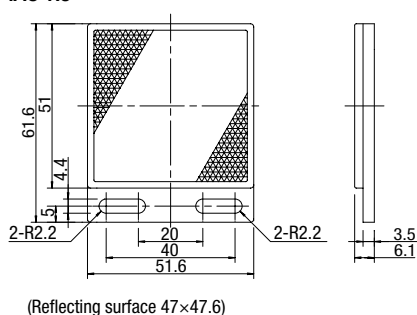

IAC-R10

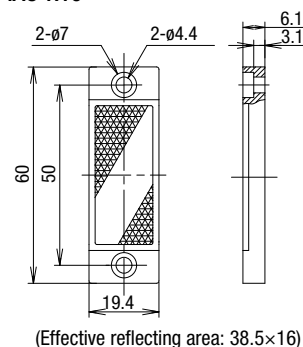

IAC-R11

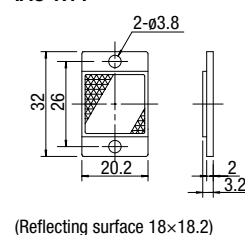


Accessory Dimensions

All dimensions in mm


Reflector Mounting Brackets

IAC-L2 (for IAC-R5)

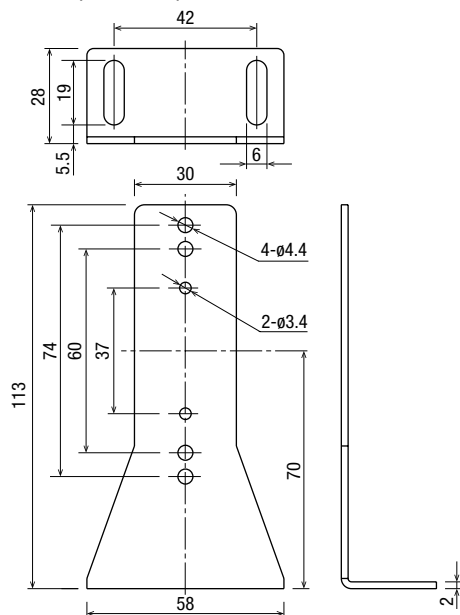


Material: SPCC (zinc chromate plating, black)

IAC-L3 (for IAC-R6)

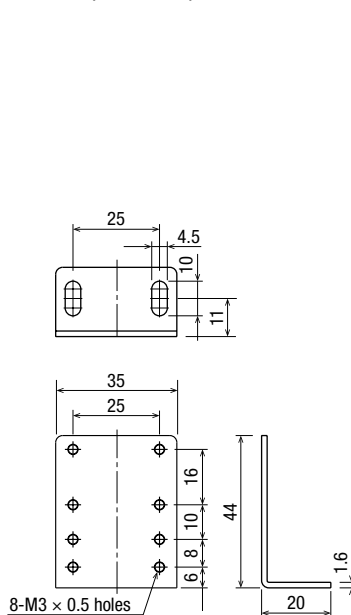






Material: SPCC (zinc plating)

IAC-L5 (for IAC-R8)

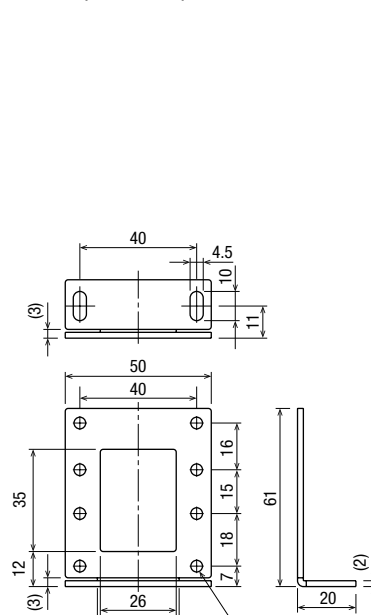

Material: SPCC (zinc plating)

Connector Cable (connector on one end)

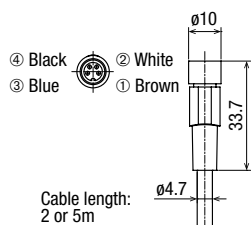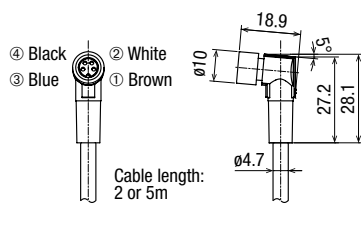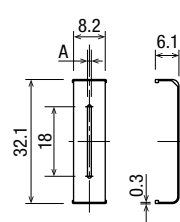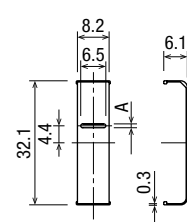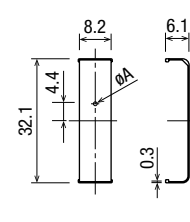Straight
(SA9Z-CM8K-4S□)Right-angle
(SA9Z-CM8K-4L□)Vertical Slit
SA9Z-S06
SA9Z-S07
SA9Z-S08Horizontal Slit
SA9Z-S09
SA9Z-S10
SA9Z-S11Round Slit
SA9Z-S12
SA9Z-S13
SA9Z-S14


- Dielectric strength when installed on the SA1E: 1000V AC (between live part and mounting bracket, except between live part and tightening ring)

Material: Stainless Steel

Note: For slit width A, see M-008.


Air Blower Mounting Block

SA9Z-A02

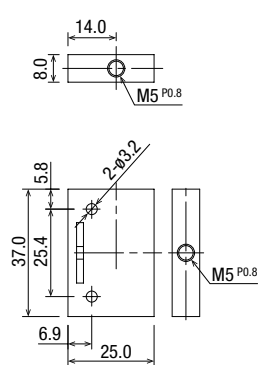

(Material: Anodized aluminum surface)

With Mounting Bracket

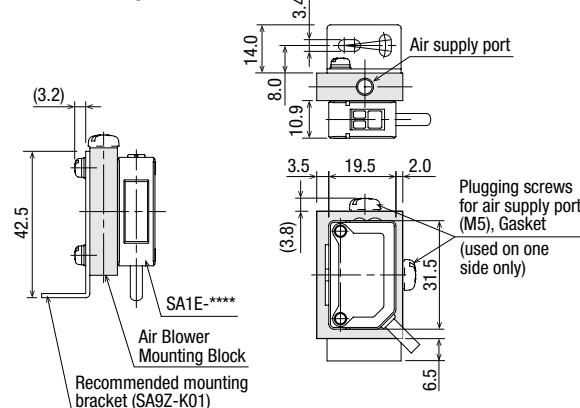


- The SA9Z-A02 air blower mounting block is supplied with two mounting screws (M3 x 20 mm sems screws), one screw for plugging the air supply port (M5 x 6 mm), and one gasket for plugging the air supply port.
- An air tube fitting (M5) can be installed to either the top or side. Tighten the fitting to a torque of 0.5 N·m maximum.
- The air tube fitting and mounting bracket are not supplied and must be ordered separately (recommended mounting bracket: SA9Z-K01).

Operating Instructions

Indicator and Output Operation (except for background suppression model)

- The operation LED turns on (yellow) when the control output is on.

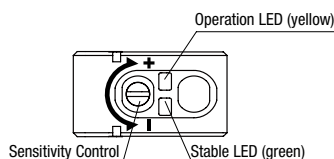

- The stable LED turns on (green) either at stable incident or stable interruption. Make sure to use the photoelectric switch after the stable operation is ensured.
- In the light ON operation, the output turns on when the receiving light intensity level is 1.0 or over as shown on the right.
- In the dark-ON operation, the output turns on when the receiving light intensity level is 1.0 or less as shown on the right.

	Receiving Light Intensity Level	Light Receiving Status	Stable LED (green)	Operation LED (yellow)/Control Output	
				Light ON	Dark ON
Operation Level	1.2 and over	Stable Incident	ON	ON	OFF
	1.0	Unstable Incident	OFF	OFF	ON
		Unstable Interruption			
	0.8 and below	Stable Interruption	ON	OFF	ON

Optical Axis Alignment (Light ON)

Through-beam

Fasten the receiver temporarily. Place the projector to face the receiver. Move the projector up, down, right and left to find the range where the operation LED turns on. Fasten the projector in the middle of the range. Next, move the receiver up, down, right and left in the same manner and fasten in the middle of the range where the operation LED turns on. Make sure that stable LED turns on at stable incident and stable interruption.

Polarized retro-reflective

Install the reflector perpendicularly to the optical axis. Move the SA1E photoelectric switch up, down, right and left to find the range where the operation LED turns on. Fasten the switch in the middle of the range. Polarized retro-reflective model can be installed also by finding the position where the reflection of projected red light is most intense, while observing the reflection on the reflector from behind the switch. Make sure that stable LED turns on at stable incident and stable interruption.

Diffuse-reflective/Small-beam reflective

Place the SA1E photoelectric switch where the switch can detect the object. Move the switch up, down, right and left to find the range where the operation LED turns on. Fasten the switch in the middle of the range. Make sure that stable LED turns on at stable incident and stable interruption. Because the light source element of small-beam reflective model is a red LED, visual inspection is possible as well.

Sensitivity Adjustment

Referring to the table at right, adjust the sensitivity of the SA1E photoelectric switch when necessary, in such cases as the through-beam model is used to detect small or translucent objects or the reflective model is affected by background. The table explains the status of operation LED when the operation mode is set to light ON.

- After adjusting the sensitivity, make sure that stable LED turns on at stable incident and stable interruption. For detecting objects too small to turn on the stable LED, use an optional slit.

- Sensitivity is set to the maximum (+) at the factory before shipment. When adjusting the sensitivity, use the screwdriver supplied with the SA1E photoelectric switch to turn the control as shown below, to a torque of 0.05 N·m maximum.

Step	Photoelectric Switch Status	Sensitivity Control	Adjusting Procedure
1	Receiving light • Through-beam, polarized reflective: No object detected • Diffuse reflective, small-beam reflective: Object detected		Turn the control counter-clockwise to the minimum (−). Then turn clockwise (toward +) until the operation LED turns on (turns off with dark ON type) (point A).
2	Light is interrupted • Through-beam, polarized reflective: Object detected • Diffuse reflective, small-beam reflective: No object detected		At interruption status, turn the control clockwise (toward +) from point A, until the operation LED turns on (turns off with dark ON type) (point B). If the operation LED does not turn on (turn off with dark ON type) even though the control has reached the maximum (+), set the maximum position (+) as point B.
3	—		Set the middle point between point A and B as point C.

Adjustment of Sensing Range for Background Suppression (BGS) Model

- When adjusting the sensing range, follow the instruction below.


Step	Distance Control	Adjusting Procedure
1		Install the photoelectric switch and the object firmly. Turn the control counterclockwise until the operation LED turns off (turns on with dark ON type). From this point, turn the control clockwise until the operation LED turns on (turns off with dark ON type) (point A).
2		Remove the object, and confirm that the operation LED turns off (turns on with dark ON type). Turn the control clockwise until the operation LED turns on (detecting the background) (turns off with dark ON type) (point B). (Note 1)
3		Set the middle point between point A and B as point C. (Note 2)

Note 1: When the background is far off and not detected, turn the control 360°, and set the point as point C.

Note 2: Because the control is multi-turn, it may take more than one turn to move from point A to point B.

Note 3: Turning the control clockwise lengthens the sensing distance.

Note 4: Background suppression (BGS) model is not provided with a stable LED.

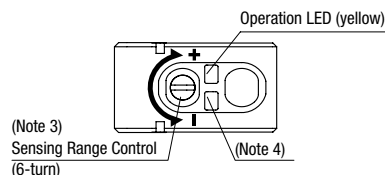

APEM

Switches & Pilot Lights

Control Boxes

Emergency Stop Switches

Enabling Switches

Safety Products

Explosion Proof

Terminal Blocks

Relays & Sockets

Circuit Protectors

Power Supplies

LED Illumination

Controllers

Operator Interfaces

Sensors

SA1E

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

SA1E-L

Operating Instructions

Power Supply and Wiring

- Do not use the SA1E photoelectric switch at the transient status immediately after turning on the power (approx. 100 ms, background suppression model: 200 ms). When the load and switch use different power supplies, make sure to power up the switch first.
- Use a power supply with little noise and inrush current, and use the photoelectric switch within the rated voltage range. Make sure that ripple factor is within the allowable limit. Do not apply AC voltage, otherwise the switch may blow out or burn.
- When using a switching power supply, make sure to ground the FG (frame ground) terminal, otherwise high-frequency noise may affect the photoelectric switch.
- Turn power off before inserting/removing the connector on photoelectric switch. Make sure that excessive mechanical force is not applied to the connector. Connect the connector cable to a tightening torque of 0.5 N·m maximum.
- To ensure the degree of protection, use the applicable connector cable for the connector model. Connector cables are ordered separately.
- Avoid parallel wiring with high-voltage or power lines in the same conduit, otherwise noise may cause malfunction and damage. When wiring is long, use a separate conduit for wiring.
- Use a cable of 0.3 mm² minimum core wires, then the cable can be extended up to 100m.

Installation

Installing the Photoelectric Switch

- Do not install the SA1E photoelectric switches in an area where the switches are subject to the following conditions, otherwise malfunction and damage may be caused.
 - * Inductive devices or heat source
 - * Extreme vibration or shock
 - * Large amount of dust
 - * Water, oil, chemicals
 - * Outdoor
- Make sure to prevent sunlight, fluorescent light, and especially the fluorescent light of inverters from entering the receiver of the photoelectric switch directly. Keep the through-beam model receiver away from intense extraneous light.
- Interference prevention allows two SA1E switches to be mounted in close proximity. However, the through-beam model is not equipped with interference prevention. Maintain appropriate distance between the switches referring to the lateral displacement characteristics.
- Because the SA1E photoelectric switches are IP67 waterproof, the SA1E can be exposed to water. However, wipe water drops and smears from the lens and slit using a soft cloth to make sure of the best detecting performance.
- Polycarbonate or acrylic resins are used for optical elements. Do not use ammonia or caustic soda for cleaning, otherwise optical elements will be dissolved. To remove dust and moisture build-up, use soft dry cloth.
- Tighten the mounting screws (M3) to a torque of 0.5 N·m. Do not tighten the mounting screws excessively or hit the switch with a hammer, otherwise the protection degree cannot be maintained.

Installing the Reflector


- Use M4 mounting screws for the IAC-R5 and IAC-R8 reflector, and M3 mounting screws for the IAC-R6 reflector. Tighten the mounting screws to a tightening torque of 0.5 N·m maximum. Mounting screws are not supplied with the switch.
- Use the M3 self-tapping screw, flat washer, and spring washer to tighten the IAC-R7 reflector to a torque of 0.5 to 0.6 N·m.
- Optional reflector mounting bracket IAC-L2 is not supplied with mounting screws or nuts.
- IAC-L3 and IAC-L5 are supplied with mounting screws for mounting the reflector on the bracket.
- Reflector IAC-RS1 and IAC-RS2 can be installed directly on a flat surface using the adhesive tape attached to the back of the reflector. Before attaching the reflector, clean the board surface to ensure secure attachment.

Installing the air blower mounting block SA9Z-A02

- When installing the SA9Z-A02 on the SA1E photoelectric switch, use the attached M3 × 20 mounting screws and tighten to a torque of 0.5 N·m maximum.
- Do not use the mounting screw (M3 × 12) supplied with the mounting bracket (SA9Z-K01) to mount the SA1E photoelectric switches.
- The SA9Z-A02 cannot be used with the through-beam slits (SA9Z-S06 to S14).
- The air tube fitting (M5) can be installed to either the top or side. The air tube is not supplied.
- Close the unused port using the air supply port plugging screw and gasket (supplied with SA1E) to a tightening torque of 1 to 2 N·m maximum. The recommended air pressure is 0.1 to 0.3 MPa.

Installing the background suppression (BGS) model

- This sensor can detect objects correctly when the sensor head is installed perpendicular to the moving object. Install the sensor head as shown below to minimize sensing errors.

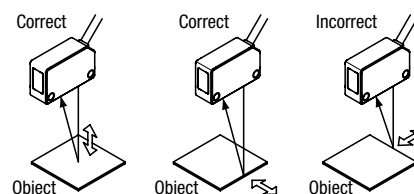

- If the sensor is used in a place subject to a large variations in the ambient temperature, the characteristics may change depending on the target object. Be sure to check the operation under the actual operating conditions.

Ordering Terms and Conditions

Thank you for using IDEC Products.

By purchasing products listed in our catalogs, datasheets, and the like (hereinafter referred to as "Catalogs") you agree to be bound by these terms and conditions. Please read and agree to the terms and conditions before placing your order.

1. Notes on contents of Catalogs

- (1) Rated values, performance values, and specification values of IDEC products listed in this Catalog are values acquired under respective conditions in independent testing, and do not guarantee values gained in combined conditions.
Also, durability varies depending on the usage environment and usage conditions.
- (2) Reference data and reference values listed in Catalogs are for reference purposes only, and do not guarantee that the product will always operate appropriately in that range.
- (3) The specifications / appearance and accessories of IDEC products listed in Catalogs are subject to change or termination of sales without notice, for improvement or other reasons.
- (4) The content of Catalogs is subject to change without notice.

2. Note on applications

- (1) If using IDEC products in combination with other products, confirm the applicable laws / regulations and standards.
Also, confirm that IDEC products are compatible with your systems, machines, devices, and the like by using under the actual conditions. IDEC shall bear no liability whatsoever regarding the compatibility with IDEC products.
- (2) The usage examples and application examples listed in Catalogs are for reference purposes only. Therefore, when introducing a product, confirm the performance and safety of the instruments, devices, and the like before use. Furthermore, regarding these examples, IDEC does not grant license to use IDEC products to you, and IDEC offers no warranties regarding the ownership of intellectual property rights or non-infringement upon the intellectual property rights of third parties.
- (3) When using IDEC products, be cautious when implementing the following.
 - i. Use of IDEC products with sufficient allowance for rating and performance
 - ii. Safety design, including redundant design and malfunction prevention design that prevents other danger and damage even in the event that an IDEC product fails
 - iii. Wiring and installation that ensures the IDEC product used in your system, machine, device, or the like can perform and function according to its specifications
- (4) Continuing to use an IDEC product even after the performance has deteriorated can result in abnormal heat, smoke, fires, and the like due to insulation deterioration or the like. Perform periodic maintenance for IDEC products and the systems, machines, devices, and the like in which they are used.
- (5) IDEC products are developed and manufactured as general-purpose products for general industrial products. They are not intended for use in the following applications, and in the event that you use an IDEC product for these applications, unless otherwise agreed upon between you and IDEC, IDEC shall provide no guarantees whatsoever regarding IDEC products.
 - i. Use in applications that require a high degree of safety, including nuclear power control equipment, transportation equipment (railroads / airplanes / ships / vehicles / vehicle instruments, etc.), equipment for use in outer space, elevating equipment, medical instruments, safety devices, or any other equipment, instruments, or the like that could endanger life or human health
 - ii. Use in applications that require a high degree of reliability, such as provision systems for gas / waterworks / electricity, etc., systems that operate continuously for 24 hours, and settlement systems
 - iii. Use in applications where the product may be handled or used deviating from the specifications or conditions / environment listed in the Catalogs, such as equipment used outdoors or applications in environments subject to chemical pollution or electromagnetic interference
If you would like to use IDEC products in the above applications, be sure to consult with an IDEC sales representative.

3. Inspections

We ask that you implement inspections for IDEC products you purchase without delay, as well as thoroughly keep in mind management/maintenance regarding handling of the product before and during the inspection.

4. Warranty

(1) Warranty period

The warranty period for IDEC products shall be one (1) year after purchase or delivery to the specified location. However, this shall not apply in cases where there is a different specification in the Catalogs or there is another agreement in place between you and IDEC.

(2) Warranty scope

Should a failure occur in an IDEC product during the above warranty period for reasons attributable to IDEC, then IDEC shall replace or repair that product, free of charge, at the purchase location / delivery location of the product, or an IDEC service base. However, failures caused by the following reasons shall be deemed outside the scope of this warranty.

- i. The product was handled or used deviating from the conditions / environment listed in the Catalogs
- ii. The failure was caused by reasons other than an IDEC product
- iii. Modification or repair was performed by a party other than IDEC
- iv. The failure was caused by a software program of a party other than IDEC
- v. The product was used outside of its original purpose
- vi. Replacement of maintenance parts, installation of accessories, or the like was not performed properly in accordance with the user's manual and Catalogs
- vii. The failure could not have been predicted with the scientific and technical standards at the time when the product was shipped from IDEC
- viii. The failure was due to other causes not attributable to IDEC (including cases of force majeure such as natural disasters and other disasters)

Furthermore, the warranty described here refers to a warranty on the IDEC product as a unit, and damages induced by the failure of an IDEC product are excluded from this warranty.

5. Limitation of liability

The warranty listed in this Agreement is the full and complete warranty for IDEC products, and IDEC shall bear no liability whatsoever regarding special damages, indirect damages, incidental damages, or passive damages that occurred due to an IDEC product.

6. Service scope

The prices of IDEC products do not include the cost of services, such as dispatching technicians. Therefore, separate fees are required in the following cases.

- (1) Instructions for installation / adjustment and accompaniment at test operation (including creating application software and testing operation, etc.)
- (2) Maintenance inspections, adjustments, and repairs
- (3) Technical instructions and technical training
- (4) Product tests or inspections specified by you

The above content assumes transactions and usage within your region. Please consult with an IDEC sales representative regarding transactions and usage outside of your region. Also, IDEC provides no guarantees whatsoever regarding IDEC products sold outside your region.

IDEC CORPORATION

Head Office 6-64, Nishi-Miyahara-2-Chome, Yodogawa-ku, Osaka 532-0004, Japan

USA IDEC Corporation
EMEA APEM SAS

Singapore IDEC Izumi Asia Pte. Ltd.
Thailand IDEC Asia (Thailand) Co., Ltd.
India IDEC Controls India Private Ltd.

China IDEC (Shanghai) Corporation
IDEC Izumi (H.K.) Co., Ltd.
Taiwan IDEC Taiwan Corporation

Japan IDEC Corporation

Specifications and other descriptions in this brochure are subject to change without notice.

2025 IDEC Corporation, All Rights Reserved.

 **www.idec.com**

